

PRODUCT INFORMATION:

Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Always stake or weigh down your Z-Shade™ product. Do not use in any potentially windy or rainy weather. Wind and rain can damage your product and may also result in injury to you or others. Therefore, do not rely on product for protection in heavy or prolonged rain storms.
- The Z-Shade product is designed as a temporary sun shelter. Do not leave up for extended periods.
- Use caution when handling the Z-Shade frame. Avoid pinching hands or fingers as frame opens or closes.
- Do not use Z-Shade product in a lightning storm.
- Do not leave your Z-Shade product unattended.
- Do not build fires under Z-Shade product.

PRODUCT CARE/MAINTENANCE:

For long lasting durability and the best possible protection for your Z-Shade product, follow these care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for top cleaning.
- Let the Z-Shade top and frame dry completely before closing or storing to avoid mildew.
- The Z-Shade frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before attaching top.
- Slightly tighten bolts if frame becomes loose.

2 YEAR LIMITED WARRANTY

Z-Shade Company Ltd., manufacturer of the product, warrants to the original purchaser who provides a dated sales receipt from an Authorized Dealer, each part of the Z-Shade product to be free from defects in material or workmanship for a period of two (2) years after the date of original purchase. The Z-Shade frame is covered under a limited two (2) year warranty and guarantees the frame to be free from defects in material or workmanship. This warranty applies only for normal and expected uses, as determined by the manufacturer.

Z-Shade Company Ltd. obligation and liability under this warranty is limited to the repair or replacement (*at its option*) of the product or its parts, after its own review and examination.

RETURN GOODS: Before returning any part or product to Z-Shade, please phone or write to obtain specific return shipping instructions. All shipping costs must be prepaid, and Z-Shade is not responsible for products damaged in transit.

CONDITIONS: This warranty shall be void as to any product which has been altered or modified in any manner. This warranty does not apply to damages caused by wind, rain, or other forces of nature, not to accidental or deliberate damage of the product, nor to use of the product that does not conform with the product instructions.

This warranty is provided in lieu of all other warranties, expressed or implied.

©2014 Z-Shade Company Ltd. All Rights Reserved.
Distributed by Academy, Ltd., 1800 N. Mason Rd., Katy, Texas 77449
1013

USER MANUAL



INSTANT GAZEBO

13ft x 13ft (3.96m x 3.96m)



Distributed by Academy, Ltd.
1800 N. Mason Rd.
Katy, Texas 77449
academy.com

Warranty/Customer Service:
(855) 4 Z-SHADE
855-497-4233

 
PACKAGE INCLUDES

- Instant Gazebo Frame
- Roller Bag
- Two-Tone Polyester Top (A)(B)
- 4-Piece Stake Kit
- (4) Corner Skirts (C)




INITIAL SET UP


Please read each step before you attempt to set up. Save these instructions for future reference.

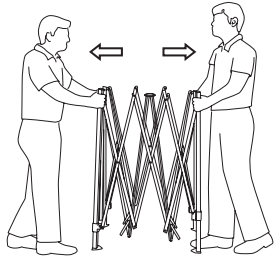

 - Place your Instant Gazebo frame in the center of area to be shaded. With partner, grasp two outer legs, slightly lift off the ground, and step backwards, stopping at full arms' length.

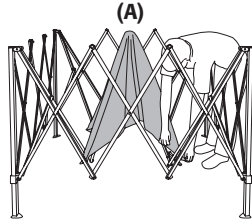


 - Spread the top vent fabric (A) over the peak section and slide the 4 fabric corners over the 4 vent fingers.

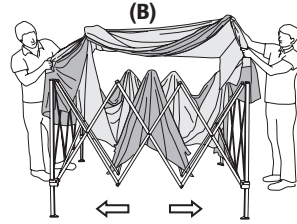



- Expand the frame to approx. 2/3 open. Spread the larger fabric (B) over the frame, tuck the fabric under the top vent fabric fingers and using the hook and loop strips, secure the top to the trusses at 8 different points.

 SET UP

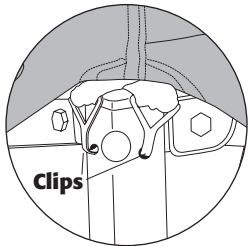





- Attach the larger fabric to the frame by inserting the 2 clips into the small holes at the top of each leg.

  - With partner on opposite side of canopy, grasp the top and bottom of the truss on opposite sides. Lift up and step backward until canopy is 3/4 opened. *Be careful not to pinch fingers.* Expand frame to fully open. Make sure the vent fingers are released – over the LARGE FABRIC.

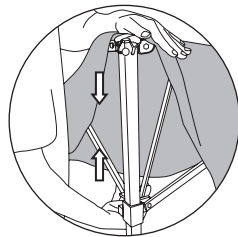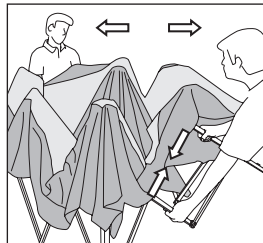


- To engage Pull Pin slider at each corner, first lift the fabric off of the slider, then with one hand hold the top of the leg while pushing up on the slider with the other hand. The Pull Pin will engage the hole. Repeat on all 4 corners.

    - Insert extension rods in the top of the legs.
 - Secure corner fabric to the leg by inserting the 2 clips into the small holes at the top of each leg.
 - Finally, pull the fabric out over the end of the extension rods and secure using the sewn pockets. Repeat on all 4 corners.

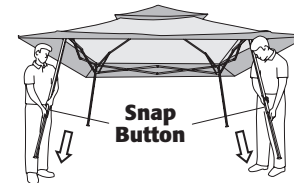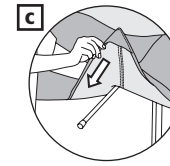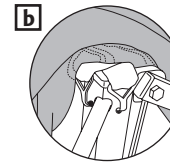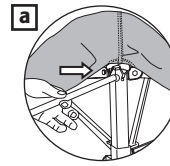


- Lift outer legs up and slide out the inner legs until the snap button locks into the outer leg. Repeat on opposite legs.

 5 (c) ATTACHING CORNER SKIRTS

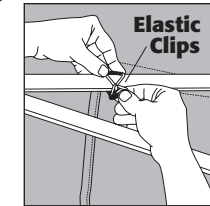


- Erect frame to the lowest setting.
- Wrap the skirt around the outside of the leg with the clip on top. *Non-coated side facing outward.*
- Connect the elastic clips around the top truss on both sides.
- Use the attached tie-back straps to gather the skirt. Repeat on all 4 corner skirts.

 TAKE DOWN

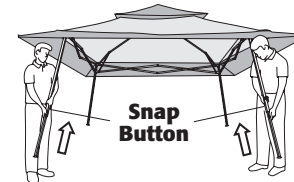


- With partner, slightly lift up 2 adjacent outer legs, depress snap button to unlock and telescope inner legs into outer legs. Repeat on opposite legs.

 - Release Pull Pin at each corner by first lifting fabric away from slider. With one hand push up on truss near the Pull Pin, pull the pin out to release. *NOTE: It is much easier to release Pull Pin when the canopy weight has been removed from the Pull Pin.*

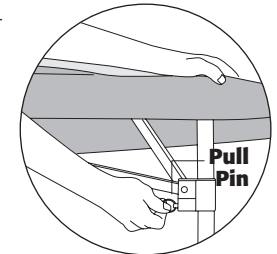

- Now, with the canopy in lowered position, remove extension rods.
 - Pull the fabric back out from the sewn pockets to gain access to extension rods.
 - Remove fabric by releasing the 2 clips from the small holes at the top of each leg.
 - Carefully slide extension rods out from the top of the legs. Repeat on all 4 corners.
- With partner on opposite side, grasp top and bottom area of trusses. Lift the canopy up slightly and shake it while stepping towards your partner until the unit is 3/4 closed. With each partner grasping two outer legs, push frame together to fully close it. *Be careful not to pinch fingers!* Store canopy in roller bag.

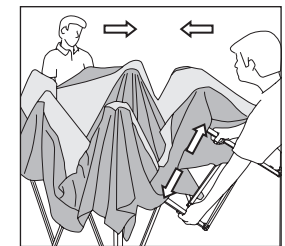 

WARNING: Keep all flame and heat sources away from all product fabrics. These fabrics meet the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.